

(7) Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES

TLV-PD SERIES - INSTALLATION GUIDE

Information to consider before installing your autoclave.

INDEX

Electrical connection (Standard)	Page 2
Electrical connection (North America)	Page 3
Connections graph	
Included components	
Drainage connections	Page 6
Water supply for cooling	
Water supply for sterilization	Page 9
Use of ECOPUR-TLV in combination with TLV-PD Series autoclaves	Page 10
Integrated basket lift system installation	Page 11
Dimensions to consider Environmental conditions Recommended maintenance	Page 14
Environmental conditions	Page 14
Recommended maintenance	Page 15





ELECTRICAL CONNECTION STANDARD

The following table shows the plug configuration according to international IEC and SCHUKO standards. For customers requiring other plugs and other electrical configurations, please contact our technical service.

MODELS	FREQUENCY	POWER	AMPERES / PHASE	TENSION	CONNECTION
TLV-50PD	50/60 Hz	3600 W	15 A	230 (1P+N+PE) V	16 A 1
TLV-50PD-115V	50/60 Hz	3600 W	30 A	120 (1P+N+PE) V	32 A 🕕
TLV-75PD	50/60 Hz	3600 W	15 A	230 (1P+N+PE) V	16 A 🚺
TLV-75PD-115V	50/60 Hz	3600 W	30 A	120 (1P+N+PE) V	32 A 🕕
TLV-110PD	50/60 Hz	9000 W	13 A	400 (3P+N+PE) V	16 A 2
TLV-110PD-220T	50/60 Hz	9000 W	23 A	230 (3P+PE) V	32 A 🜀
TLV-110PD-6K-220M	50/60 Hz	6000 W	26 A	230 (1P+N+PE) V	32 A 4
TLV-150PD	50/60 Hz	9000 W	13 A	400 (3P+N+PE) V	16 A 2
TLV-150PD-220T	50/60 Hz	9000 W	23 A	230 (3P+PE) V	32 A 🜀
TLV-150PD-6K-220M	50/60 Hz	6000 W	26 A	230 (1P+N+PE) V	32 A 4





Ø Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES

ELECTRICAL CONNECTION NORTH AMERICA

The following table shows the plug configuration according to NEMA standards for the United States of America and other regions. For customers requiring other plugs and other electrical configurations, please contact our technical service.

Attention: The following table lists standard electrical configuration versions. The voltage of each model can be modified to suit other configurations if required. Moreover, certain models can be adjusted between single-phase and three-phase. Additionally, the provided NEMA plug can also be customized if needed.

MODELS	FREQUENCY	POWER	AMPERES / PHASE	TENSION	CONNECTION
TLV-50PD-115V-US	50/60 Hz	3600 W	30 A	120 (1P+N+PE) V	NEMA 5-50P 1
TLV-75PD-115V-US	50/60 Hz	3600 W	30 A	120 (1P+N+PE) V	NEMA 5-50P 1
TLV-110PD-220T-US	50/60 Hz	9000 W	23 A	230 (3P+PE) V	NEMA L15-30P 2
TLV-150PD-220T-US	50/60 Hz	9000 W	23 A	230 (3P+PE) V	NEMA L15-30P 2



5-50R


L15-30R




⑦ Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES

CONNECTIONS GRAPH

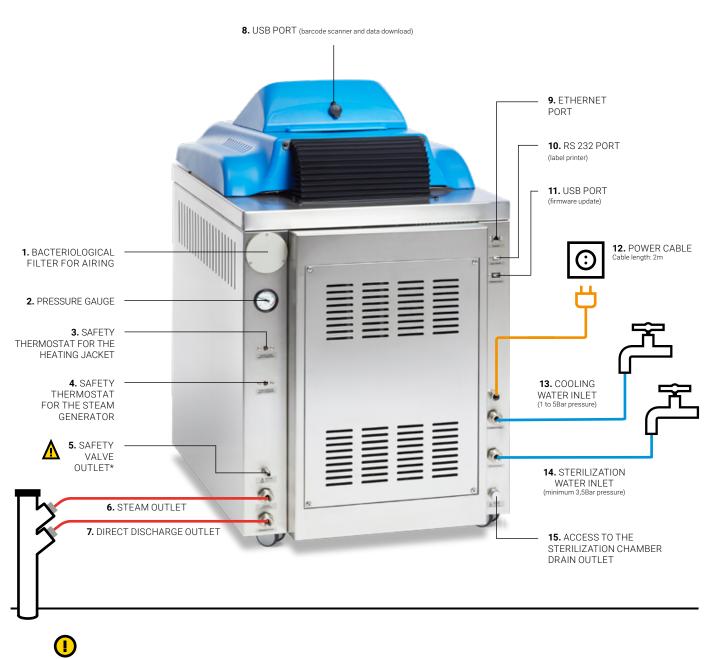

ATTENTION! Outlets 6 and 7 must be driven to the drain separately and must be properly attached to it. See page 6.





Ø Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES

INCLUDED COMPONENTS

In addition to the accessories chosen at the time of purchase of the autoclave (baskets, label printer, ticket printer, barcode scanner, external server, etc.), the following components are included:

 $1\ stainless\ steel\ protective\ rack\ for\ the\ sterilization\ chamber,\ with\ legs\ to\ place\ it\ on\ the\ inner\ base\ of\ the\ sterilization\ chamber.$



MODELS	DIAMETER
TLV-50PD	360 mm
TLV-75PD	360 mm
TLV-110PD	460 mm
TLV-150PD	460 mm



4 reinforced NBR hoses 2m long with 3/4" connection at both ends for threaded connection to the equipment and tap (gaskets included).

For: 6. STEAM OUTLET 7. DIRECT DISCHARGE OUTLET 13. COOLING WATER INLET 14. STERILIZATION WATER INLET



⑦ Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES

DRAINAGE CONNECTIONS

All models from the TLV-PD Series are equipped with two drainage outlets which serve to discharge the purge, regulate internal pressure, and expel the steam and condensates produced during each sterilization cycle. Additionally, they feature an active cooling system, which utilizes a heat exchanger with the main water supply to reduce the temperature of these gas and liquid emissions to a safe level before being discharged into the drain.

There are three options for managing the autoclave discharge, A, B and C using the STEAM OUTLET (6) and the DIRECT DISCHARGE OUTLET (7).

STANDARD

A. Connect both connections, the STEAM OUTLET (6) and the DIRECT DISCHARGE OUTLET (7), independently to a drain using the provided hoses.




OPTIONAL IF A DRAIN IS NOT AVAILABLE

B. If a drain is not available, an external tank can be used for equipment drainage. For this purpose, the DIRECT DISCHARGE OUTLET (7) and the STEAM OUTLET (6) connections, must be connected to the external tank TANK-B.





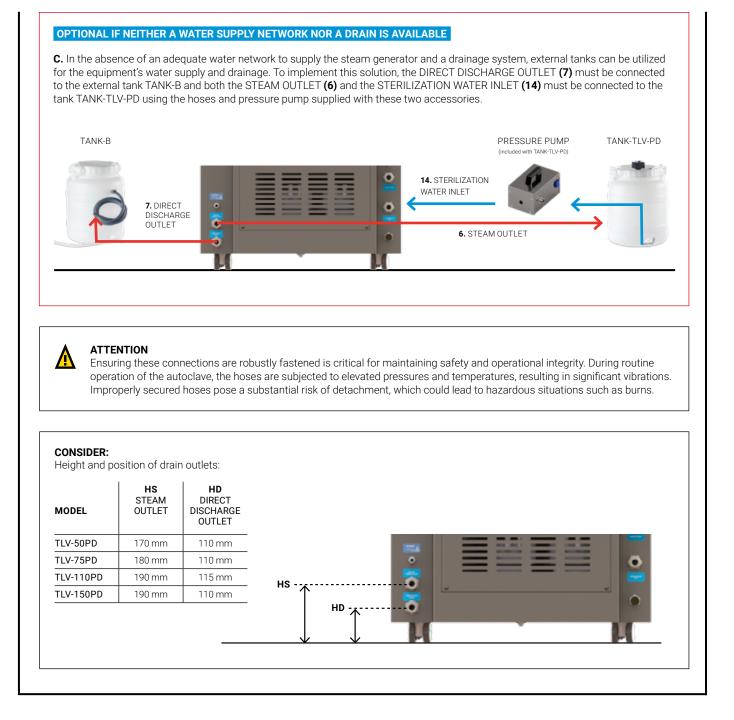



WATER SUPPLY FOR COOLING


All models from the TLV-PD Series are equipped with an active cooling system, which utilizes a heat exchanger with the main water supply to reduce the temperature of the gas and liquid emissions to a safe level before being discharged into the drain.

The COOLING WATER INLET (13) must be connected to a 3/4" GAS tap from a water main with a minimum pressure of 1Bar.



ATTENTION

If a water supply network is not available to feed the cooling water inlet of the autoclave, the active cooling function will not be used for discharges and expelled steam. In this case, it is crucial to note that if the drains and outlets are used shortly after a sterilization cycle has finished, the water may exit at a high temperature, so the drain pipes must be able to withstand high temperatures.

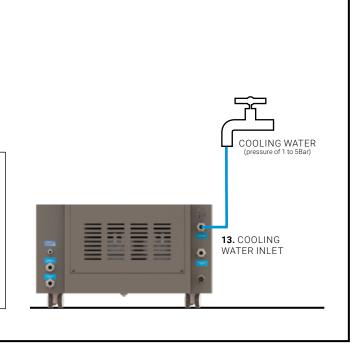



Ø Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES

WATER SUPPLY FOR STERILIZATION AUTOMATIC SUPPLY TLV-PD Series autoclaves have automated filling of the steam generator that produces the steam during normal operation of the autoclave. Purified water must be used and supply options A, B and C are available using the STERILIZATION WATER INLET (14). A. Use a water main (1 to 5Bar pressure) connected to a ECOPUR-TLV water purifier and connect to the automatic sterilization water inlet of the autoclave. 3/4" GAS TAP RAYPA NON-PURIFIED MAIN WATER ECOPUR-TLV ACCESSORY (pressure from 1 to 5Bar) B. Use a previously purified water main (1 to 5Bar pressure) connected directly to the autoclave's automatic water supply inlet. 3/4" GAS TAP RAYPA PURIFIED MAIN WATER (pressure from 1 to 5Bar) C. Use the external tank TANK-TLV-PD with purified water and connect it to the pressure pump supplied with the accessory; connect the pump directly to the automatic water supply inlet of the autoclave. This tank is equipped with a level sensor that emits an acoustic signal when it needs to be refilled. RAYPA TANK-TLV-PD ACCESSORY PRESSURE PUMP (included with TANK-TLV-PD)



⑦ Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES

IMPORTANT NOTE:

PURIFIED WATER

The water used to feed the autoclave must be free of contaminants and meet the following hardness and conductivity requirements:

- Hardness: ≤ 0,02mmol/L
- Conductivity: between 5µS/cm and 15µS/cm

Multiple systems may be used to obtain water which fulfills these requirements: osmosis, demineralization, decalcification, etc.

*Note: Take into account that distilled water that is too pure (conductivity less than 5µS/cm) is not recommended as it may cause corrosion on stainless steel in the long term and water level detection problems.

USE OF ECOPUR-TLV IN COMBINATION WITH TLV-PD SERIES AUTOCLAVES

If you don't have a purified water main available where you intend to install the autoclave, we recommend using our ECOPUR-TLV water purifier*.


The MAIN WATER INLET (A) must be connected from the purifier to a nonpurified water main with the 1,2m hose (water temperature from the main must not exceed 38°C or be less than 5°C).

Water must be driven from the PURIFIED WATER OUTLET (**B**) to the STERILIZATION WATER INLET (**14**) of the autoclave using the provided 1,2m hose.

Waste water must be driven from the WASTE WATER OUTLET **(C)** to a drain with the 1,2m provided hose.

Bear in mind that the inlet and drain hoses in the purifier must always be visible and in perfect working condition.

*It is recommended to use a single purifier for each autoclave. In case you would like to use the same purifier for more than one autoclave contact our technical support.

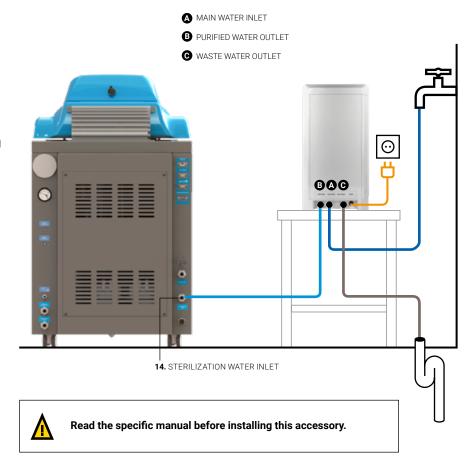




INTEGRATED BASKET LIFT SYSTEM INSTALLATION

To ensure safe handling of the baskets in larger volume autoclaves, it is recommended to use a basket lifting crane equipped with a rotating mast. For the TLV-PD Series autoclaves, the recommended model is the FIX-LIFT crane, which is capable of handling loads up to 30 kg.

CRANE DIMENSIONS L x D x H	MAXIMUM LOAD PER BASKET	AUTOCLAVE MODEL COMPATIBILITY	DIMENSIONS OF THE CRANE + AUTOCLAVE SET La x Da x Ha
83 x 700 x 2112 mm		TLV-75PD	707 x 1231 x 2106 mm
	30 Kg	TLV-110PD	806 x 1331 x 2155 mm
		TLV-150PD	806 x 1331 x 2305 mm

SIDE VIEW

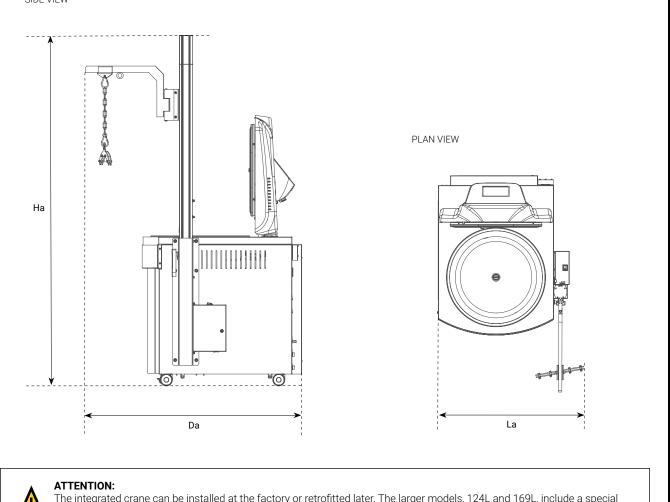

The integrated crane can be installed at the factory or retrofitted later. The larger models, 124L and 169L, include a special factory adaptation to allow for later installation of the crane. For the other models, the adaptation must be requested.



(7) Sterilization

VERTICAL AUTOCLAVES WITH SUPERDRYING SYSTEM TLV-PD SERIES






SIMPLIFIED INSTALLATION GUIDE FOR THE INTEGRATED BASKET LIFT SYSTEM


ATTENTION

Refer to the specific manual of the integrated basket lift system before assembling, installing and handling this accessory.

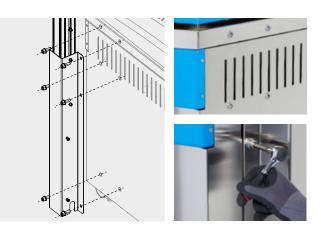

1. Preparation and assembly of the vertical column

Follow the steps indicated in the manual to assemble the vertical column and attach it to the housing. Secure it to the right side of the autoclave chassis using the provided screws and washers, and install the electrical panel box by connecting the cables.

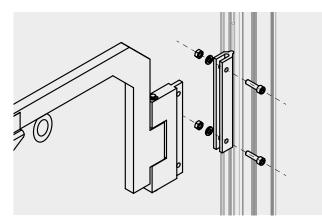

2. Installation of the mast

Install the mobile mast on the vertical column using the provided screws and washers.



3. Placement of other components

Once the structural elements are securely fastened, proceed with the placement of the remaining components: carabiner, chain, and basket holder.



4. Use of the lift system


The accessory is ready for use. To ensure safety and proper maintenance, we recommend following the instructions in the specific lift system manual carefully.



DIMENSIONS TO CONSIDER FOR THE INSTALLATION OF YOUR AUTOCLAVE

For safety reasons, the distance between both sides of the autoclave and the wall or any other object must be 100 mm, and at least 200mm between the autoclave and the rear wall.

MODELS	L LENGTH	D DEPTH	H1 HEIGHT	H2 HEIGHT with maximum door opening	HL LOADING HEIGHT	HS STEAM OUTLET CONNECTION HEIGHT	HD DIRECT DISCHARGE CONNECTION HEIGHT
TLV-50PD	610 mm	870 mm	1060 mm	1470 mm	815 mm	170 mm	110 mm
TLV-75PD	610 mm	876 mm	1110 mm	1520 mm	865 mm	180 mm	110 mm
TLV-110PD	710 mm	980 mm	1160 mm	1665 mm	915 mm	190 mm	115 mm
TLV-150PD	710 mm	980 mm	1310 mm	1810 mm	1065 mm	190 mm	110 mm

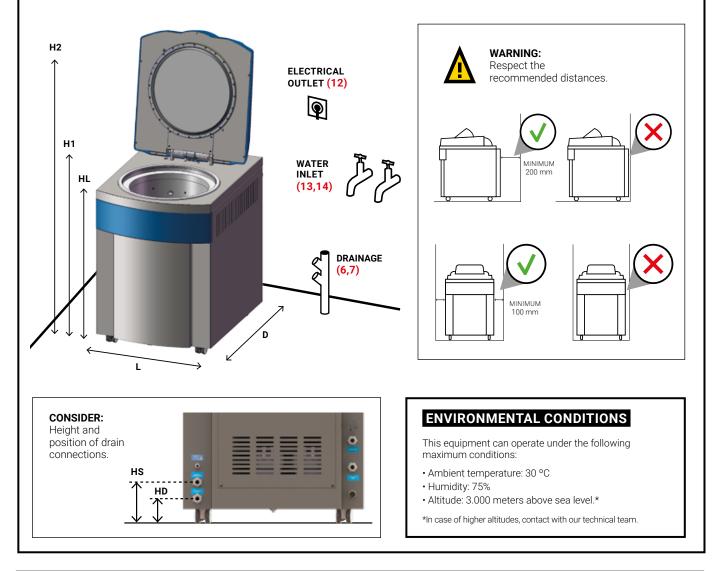



RECOMMENDED MAINTENANCE

Autoclaves are like cars: they need regular maintenance for them to work properly, to ensure good condition, prevent deterioration of its components, and maximize their useful life. Frequent cleaning and regular maintenance are essential, as autoclaves work at high pressures and temperatures and are therefore subject to a high level of stress.

For clients that perform multiple cycles each day, we recommend carrying out maintenance and cleaning tasks more frequently.

DAILY MAINTENANCE

Clean the gasket using a clean cotton cloth with a mild vinegar solution (or a comparable product) to reduce the formation of lime deposits.

Wipe the external surfaces with a clean cotton cloth moistened with water and a neutral detergent. Ensure all surfaces are thoroughly dried afterwards.



Clean the sterilization chamber with a clean cotton cloth dampened with water and neutral detergent. Dry the chamber thoroughly after cleaning.

Clean all components with a clean cotton cloth and a small amount of water and neutral detergent. Ensure all components are dried completely after cleaning.

ANNUAL MAINTENANCE

Autoclaves from the TLV-PD Series are equipped with a bacteriological filter, which should be replaced either upon reaching the recommended interval or when a filter blockage is detected.

Conducting a technical inspection is essential to ensure consistent process safety over time. It is necessary to periodically verify the thermodynamic process parameters (pressure and temperature), ensuring they remain within the accepted limits.







TECHNICAL SUPPORT, ORIGINAL SPARE PARTS AND EXPERIENCED CONSULTING SERVICES

For an optimal operation of the autoclave, always use original spare parts and schedule periodically, with a specialized technician, the relevant maintenance tasks, such as calibration of the temperature and pressure sensors or replacement of the sterilization chamber door gasket.

Additionally, we provide a comprehensive range of services to ensure a satisfactory user experience throughout the entire lifespan of our products. These services include support and training programs, guided start-up and qualification services, preventive and corrective maintenance, periodic calibration, technical support and repairs, as well as consulting on special applications.

Should you encounter any issues, have questions, or require further information regarding maintenance of the TLV-PD Series autoclave, please don't hesitate to reach out to our technical support service using the following contact details.



Technical support

https://www.raypa.com/en/contact/ +34 937 830 720 (Ext. 2109)







SGS

(F

TÜVRheinia

REV 04.2025